

bea-fon SL640



# General Information

---

Congratulations on the purchase of your Bea-fon SL640!

Please read this information before using the phone to make a better use of your phone. We are not responsible for any damage due to your misunderstanding of this information and misacting.

We are endeavouring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-

supported features. Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

# General Information

Your Bea-fon SL640 box contains:

- 1 mobile phone (*SL640*)
- 1 desktop charger (*SL640*)
- 1 travel charger (*SL640*)
- 1 battery (*SL640*)
- 1 USB cable (*SL640*)
- User manuals (*SL640*)

If you find the size of the script not easily readable for you, you can also find this manual on our website, where you will be able to adjust the size of the script.

Go to: [www.beafon.com/Products](http://www.beafon.com/Products)

## Device Code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is **0000**

## PIN-Code:

The PIN-code was supplied to you by your network operator together with your SIM card and/or adjusted/set up by yourself.

# Directory

General Information .....	1
General Information .....	4
Device Code: .....	4
PIN-Code: .....	4
Directory .....	5
Your Phone.....	9
Getting started.....	11
What is a SIM card? .....	11
Insert the SIM card and Micro SD card .....	11
Insert the battery as follows .....	13
Charging the battery .....	13
Switching the telephone on or off.....	15
Display (Standby mode).....	16
LED description.....	16
Screen icons:.....	16
Menu Operation .....	19
Torch.....	19
Connect an optional headset.....	20
Make a call .....	21
Make a call using the phone book.....	21
Answering a call.....	22
Operations during a call .....	22
<i>Hands Free</i> .....	23
Menu .....	23
Shortcut key functions .....	24
Phonebook .....	25

<i>To access the phonebook .....</i>	25
<i>Add new contact: .....</i>	25
<i>To edit a Phone Book entry: .....</i>	26
<i>To delete all entries from the phone or SIM card .....</i>	26
<i>To copy all entries from the phone or SIM card .....</i>	26
<i>Store a Phonebook entry to a Speed dial key (2-9) .....</i>	27
<i>Direct Number: .....</i>	27
Making calls using the Photo Contacts .....	28
Create photo contact .....	28
<b>Messages .....</b>	<b>30</b>
<i>Inbox: .....</i>	31
<i>Drafts:.....</i>	31
<i>Outbox: .....</i>	31
<i>Sent messages .....</i>	32
Message settings.....	32
Voicemail server .....	33
<b>Call history .....</b>	<b>34</b>
Missed Dialed and Received .....	34
Delete call logs .....	34
<b>Organizer .....</b>	<b>35</b>
Alarm .....	35
Tasks.....	35
Calculator.....	36
<b>Multimedia .....</b>	<b>38</b>
Image viewer .....	40

FM-radio .....	41
File Manager .....	42
<b>Settings .....</b>	<b>43</b>
Profiles (Tone settings) .....	43
Silent mode .....	43
SOS settings.....	44
Phone settings .....	47
<i>Time and date:</i> .....	47
<i>Language:</i> .....	47
<i>Pref. Input method:</i> .....	47
<i>Display:</i> .....	47
Call settings .....	48
<i>Caller ID:</i> .....	48
<i>Call waiting:</i> .....	48
<i>Call divert:</i> .....	48
<i>Call barring:</i> .....	48
<i>Call time reminder:</i> .....	48
<i>Answer Mode:</i> .....	49
<i>Advanced settings</i> .....	49
<i>Black list:</i> .....	49
Network settings .....	49
<i>Network selection:</i> .....	50
<b>Set automatic or manual mode</b> .....	50
Security settings .....	50
Connectivity: .....	50
Bluetooth: .....	50
<i>Visibility:</i> .....	51
<i>My device:</i> .....	51
<i>Search audio device:</i> .....	51

<i>Search audio device description:</i> .....	51
<i>My Name:</i> .....	52
Restore factory settings .....	52
Basic Specifications: .....	52
<b>Troubleshooting</b> .....	<b>53</b>
<b>Intended operation/use</b> .....	<b>57</b>
Phone .....	57
Battery .....	59
<b>Recycling</b> .....	<b>62</b>
<b>For your safety</b> .....	<b>63</b>
Traffic safety: .....	64
Operating environment: .....	64
Electronic equipment: .....	65
Pacemakers: .....	65
Hearing aids?.....	66
Other medical equipment: .....	66
Approved locations:.....	67
Potentially explosive atmospheres: ...	67
Vehicles: .....	68
<b>Information</b> .....	<b>69</b>
Certification information (SAR): .....	69
Declaration of Conformity: .....	70
Limitation of liability: .....	70
More information.....	71
Address .....	71



# Your Phone



1	Left menu key / Main menu key
2	Dialing / History Calls
3	Direct dialing numbers M1
4	* Key, <i>Press this button on the idle screen to enter the following symbols : * /+ /P / W.</i>
5	Receiver
6	Navi key: Key up: <i>On the idle screen this button takes you to the Messages menu.</i> Key down: <i>On the idle screen this button takes</i>

	<p><i>you to the favorite contacts.</i></p> <p><b>Key left:</b> <i>On the idle screen this button takes you to the Calendar</i></p> <p><b>Key right:</b> <i>On the idle screen this button takes you to the Alarm</i></p>
7	OK key
8	Right menu key, <i>On the idle screen this button takes you to the Phonebook menu.</i>
9	Power on/off /End key
10	Direct dialing numbers M2
11	Camera key
12	# Key, <i>Long press can switch between in silent mode with general modes; In edit mode, change the input method.</i>
13	SOS button
14	Polyphone loudspeaker
15	Volume key +
16	Volume key 15/17 - Torch key, <i>Long press the flashlight</i>
17	Volume key -

# Getting started

 
## What is a SIM card?

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


Keep the SIM card away from children. The SIM card can easily be damaged or bent. You should therefore handle the SIM card with care during installation and/or removal.

## Insert the SIM card and Micro SD card

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.

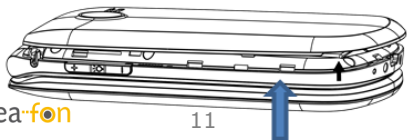

 If the battery is already inside, remove it.

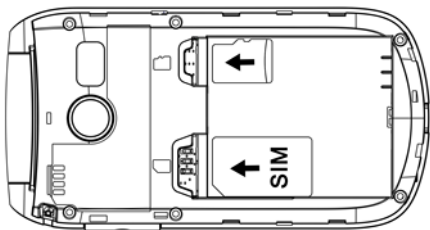

3. You can see two card slots (left side: SIM, right side: Micro SD).
4. Slide the SIM card carefully into the SIM card slot. Make sure that the gold-coloured connectors on the SIM card are facing downwards and that the bevelled corner is on the left side.
5. Memory Card: Slide the Micro SD card into the Micro SD card slot. Make sure that the gold-coloured connectors on the micro SD card are facing downwards.

## Insert the battery as follows

 
1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it 'clicks' into place.
3. Close the battery compartment by sliding the cover closed until you hear a 'click'.




## Charging the battery

There are two ways of SL640 battery charging:

### A. Desktop charging

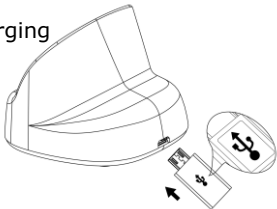

## B. Handset charging

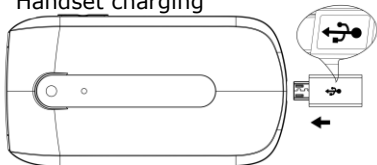 

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery, is not fully charged, and performs best after performing a full charge/discharge 3 times:

1. Plug the charger into the charger connector.
2. Plug the other end into an electrical outlet.
3. The phone may need several hours for reaching a fully charge.

When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished.

When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished.

4. The battery is fully charged when the red LED is off. Disconnect the charger from the phone and the AC outlet.

*Note: Charge the battery for at least 12 hours before using the phone for the first time.*

## **Switching the telephone on or off**

Make sure that your SIM card is in your mobile phone and that the battery is charged.

1. Press the **red key** to switch the phone on.
2. If prompted, choose your language and press *OK*.
3. If you have entered a PIN-code before, the phone will ask for the code now. Enter the PIN-code and confirm by pressing *OK*.
4. To turn off your phone, press and hold the **red key** for two seconds.

If you don't insert a SIM card, your phone shows *Insert SIM*. None of the functions related to SIM card can be used. You can make an emergency call only.

*Note: If you enter an incorrect PIN-code 3 times in succession, the phone will require you to enter the PUK-code. You have received this PUK-code together with your SIM card.*

## Display (Standby mode)

1	2	3
4		
5		
6		
7	8	

- |                     |                 |
|---------------------|-----------------|
| 1. Signal status    | 5. Time         |
| 2. Pictograms       | 6. Date and day |
| 3. Battery status   | 7. Menu         |
| 4. Network operator | 8. Names        |

## LED description

Green LED	Incoming call, missed call or unread message
Red LED	Battery low (flash), Battery charging (light)
White LED	Torch

Camera






Torch







Display







## Screen icons:


	<p><b>Signal Strength</b> <i>The vertical bars show the network connection strength. SIM card has signals.</i></p>
	<p><b>New messages</b> <i>This icon shows when you receive a new message.</i></p> <p><b>SIM Card has an unread message</b> <i>The inbox is full.</i> <i>This icon flickers when the inbox is full and you need to delete messages to receive new messages.</i></p>
	<p><b>Earphone</b> <i>This icon shows when you plug the earphone in. Voice will be heard from the earphone.</i></p>
	<p><b>Missed Calls</b> <i>This icon shows when you are viewing the missed call. SIM card has a missed call.</i></p>
	<p><b>Alert Type</b> <i>Ring</i> <i>Silent mode on and Vibration only</i> <i>Vibrate and ring</i></p>

	<p><b>Call Divert</b>  <i>This icon shows when you divert all calls unconditionally. SIM card has been set up call divert.</i></p>
	<p><b>Turn alarm on</b>  <i>This icon shows when you turn alarm on.</i></p>
	<p><b>Roaming</b>  <i>This icon shows when your phone is in roaming state. SIM card is roaming.</i></p>
	<p><b>Bluetooth</b>  <i>This icon shows when the Bluetooth is active.</i></p>
	<p><b>Battery capacity</b>  <i>This icon's colour changes according to the status of battery capacity:</i></p> 

## Menu Operation

Menu lists are used for set up and operation.

The left and right menu keys initially are *Menu* () and *Phonebook* (.

Press *Menu* () and the display changes and the soft keys become *OK* and *Back*.

Use *Up* or *Down* to move up or down menu lists, and *OK* or *Back* for the next or previous display.

Key	Function
Arrow key up	<i>Message</i>
Arrow key down	<i>Photocontacts</i>
Arrow key left	<i>Calendar</i>
Arrow key right	<i>Alarm</i>
OK key	<i>Main menu</i>

## Torch

Press and hold on the side volume keys of the phone to switch the built-in torch on/off.

## Connect an optional headset

You can use a headset (not supplied) with the micro usb type, plugged into the Headset socket on the bottom of the handset.

When using headsets, including Beafon approved ones, pay attention to volume levels and read its user guide for safety instructions. Do not connect incompatible products.

When correctly inserted the headset icon is shown.

# Call function

## Make a call

1. To make a call, enter the phone number with the prefix and press the *green key*. For international calls, enter '+' by pressing \* for 2 sec. Then enter the country code followed by the telephone number, in which the 0 of the prefix must be dropped.
2. If you have entered a wrong number, press the soft key 'right' *Clear* to remove the number to the left of the blinking cursor.
3. Press the *green key* to call the number.
4. Press the *red key* to end the call or to cancel the call attempt.

## Make a call using the phone book

If you have saved a name and number in the phone book, you can also use the phonebook to make a call.

In standby mode, press the soft key 'right' to go to *Phonebook*.

1. Scroll with the up and down arrow key to the name you want to call.

2. Press the *green key* to call the number.
3. Press the *red key* to end the call or to cancel the call attempt.

## Answering a call

When there is an incoming call, the phone rings and/or vibrates and shows the number or the corresponding name.

1. Press the *green key* or *Answer* if you would like to answer a call.
2. Press the *red key* or *silent* if you would like to reject a call, or for ending the connection after the call.

Earphone/Bluetooth Mode): When plugging the earphone (including Bluetooth earphone), you can answer a call by pressing the key on the earphone.

## Operations during a call

Press the right Menu key for Hands free  
Press left menu key "*Options*" to perform following operation during a call:

*Mute*: de/activate the microphone

*Phonebook*: To go to *Phonebook*.

*Hold*: Hold this call.

*Message*: To go to *Messages*.

*New Call:* To dial the number  
*End:* End this Call.

## *Hands Free*

During a call you can turn the hands free equipment on (Loudspeaker on).or off with the right Menu key.

## **Menu**

*Press the up arrow key to go to the Menu. Scroll through the menu using the arrow keys.*

<ol style="list-style-type: none"><li>1. Phonebook<ol style="list-style-type: none"><li>1. Contacts</li><li>2. Add new contact</li><li>3. Speed dial</li><li>4. Direct Number</li><li>5. Phonebook settings</li></ol></li><li>2. Message<ol style="list-style-type: none"><li>1. Write SMS</li><li>2. Inbox</li><li>3. Drafts</li></ol></li></ol>	<ol style="list-style-type: none"><li>4. Organizer<ol style="list-style-type: none"><li>1. Alarm</li><li>2. Tasks</li><li>3. Calculator</li><li>4. Calendar</li><li>5. Services</li></ol></li><li>5. Multimedia<ol style="list-style-type: none"><li>1. Camera</li><li>2. Image viewer</li><li>3. FM Radio</li><li>4. File Manager</li></ol></li><li>6. Settings<ol style="list-style-type: none"><li>1. Profiles</li></ol></li></ol>
---	---

<ul style="list-style-type: none"> <li>4. Outbox</li> <li>5. Sent messages</li> <li>6. Message settings</li> </ul>	<ul style="list-style-type: none"> <li>2. SOS settings</li> <li>3. Phone settings</li> <li>4. Call settings</li> <li>5. Network settings</li> <li>6. Security settings</li> <li>7. Connectivity</li> <li>8. Restore factory setting</li> </ul>
<ul style="list-style-type: none"> <li>3. Call history           <ul style="list-style-type: none"> <li>1. Missed call</li> <li>2. Dialed calls</li> <li>3. Received calls</li> <li>4. Delete call logs</li> </ul> </li> </ul>	

## Shortcut key functions

With helping the 5 key navigation, you have for quick access in idle mode following functions:

Taste	Funktion
Arrow key up	<i>Messages</i>
Arrow key down	<i>Favorite contacts</i>
Arrow key left	<i>Tasks</i>
Arrow key right	<i>Alarm</i>
OK key	<i>Main Menu</i>





# Phonebook

You can store names and phone numbers in the Internal phone book (up to 200) and in the SIM phone book (SIM dependent, but a maximum of 250).

## *To access the phonebook*

In idle mode, press *Right menu key*.

In idle mode, press *Left menu key*, *Phonebook* and press *OK*

*Note:*  Indicates entries in SIM phone book,  Indicates entries in the internal phone book.

## *Add new contact:*

1. Select *Menu*, *Phonebook* and press *OK*.
2. Select *Add new contact* and press *OK*.
3. Select *Preferred storage*, *To SIM* or *To Phone*, if you choose *To phone*: you can edit *Name*, *Number* and *Caller ringtone*. Press *Options* and *Save* if you want to save the contact.

### *To edit a Phone Book entry:*

1. Press *right menu key* to phone book search which one You want to change, press *left menu key* select *Edit* then modify the name, press *Down* modify the number.
2. Press *Option* and *OK* to save the change(s).

### *To delete all entries from the phone or SIM card*

1. Select *Menu, Phonebook* and press *OK..*
2. Select *Phonebook settings* and press *OK.*
3. Select *Delete all Contacts* and press *OK.*
4. Select *From Phone* or *From SIM* → *Delete all*
5. Press *OK* again to confirm

### *To copy all entries from the phone or SIM card*

1. Select *Menu, Phonebook* and press *OK.*
2. Select *Phonebook settings* and press *OK.*

3. Select *Copy all* and press *OK*
4. Select *To Phone* or *To SIM* → *From SIM/Phone*
5. Press *OK* again to confirm

### *Store a Phonebook entry to a Speed dial key (2-9)*

1. Select *Menu, Phonebook* and press *OK*.
2. Select *Speed dial* and Press *OK*
3. Set *Status* to *On*, press down to *Set numbers*.
4. Press *OK* the display shows ,2-9
5. Press *Up* or *Down* to choose the key to save to
6. Press *OK* to confirm the memory entry.

### *Direct Number:*

1. Select *Menu, Phonebook* and press *OK*.
2. Select *Direct Number* and press *OK*.

Add *M1* and *M2* dial numbers.

Press in Standby mode *M1* or *M2* for call

## Making calls using the Photo Contacts

In the default screen, press the *downwards arrow key*.

Here you can select up to 8 photo contacts. Scroll with the *Arrow keys* to the desired photo contact and then press the *Call key* (green key).

The photo contacts appear on the external display. Carry out the following steps in order to assign a photo to this contact:

### Create photo contact

1. In the default screen, press the *Arrow key (downwards)* in order to go to the photo contact menu.
2. Use the arrow keys to scroll.
3. To edit a photo contact, press the *left menu key* (Edit).
4. Enter the name in the first line and the phone number in the second line
5. In the third line, press the *left menu key* "Options" and add a photo; you can select the following:
  - a. *Select from file*: Select a picture you have already saved.

- b. *From camera*: Take a picture directly using the camera.
- 6. In the fourth line, you can select a ringtone.
- 7. Once you have edited the contact, press the *left menu key* (Options) and select "Save" and confirm with the *left menu key* (Select).

**Important:** For a contact picture, please use the 240x320px resolution in the camera image settings. (Press key 1 in Camera mode to switch the resolution)

*Note: To save images, you need a Micro SD memory card up to 16GB. (Not included in the accessories)*

# Messages

## Write messages

1. Select *Menu, Messages* and press *OK*
2. Press *Write SMS*

In this menu, you can compose messages.


The number of letters used can be seen at the upper right edge of the display.

### *Text input:*

The following functions are available:

- Press *0* to add a space.
- Press the *\** key to add special characters; using the "*Arrow keys*", you can navigate to the desired symbols.
- Press the arrow key to move the position indicator to the left or right.
- Press *Delete* to delete a letter; to delete the entire text, press and hold *Delete*.
- Press the *#* key to switch between upper and lower case and word recognition: *ABC, abc, 123* and pay attention to the symbol in the top left of the display.

### *Inbox:*

The *Inbox* is for storing received SMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message. And in the standby mode you see this  icon until you have read the new SMS message.

You can choose the following options while reading your received SMS:

*View, Reply, Call sender, Forward, Delete, Delete all and Save to Phonebook.*

*Note: The new message icon keeps flickering in the standby mode when your inbox is full. Please delete some messages for receiving new messages.*

### *Drafts:*

By *Drafts* you can view the draft SMS messages you have saved.

You can choose the following options while reading your draft:

*View, Send, Edit, Delete and Delete all.*

### *Outbox:*

The *Outbox* to view the messages you don't sent but saved.

You can choose the following options while reading your sent SMS:

*Send, Edit, Delete and Delete all.*

### *Sent messages*

The *Sent messages* to view the messages you sent.

You can choose the following options while reading your sent SMS:

*View, Forward, Delete and Delete all.*

## **Message settings**

You can define the SMS settings. The following functions are available:

### *SIM (Profile settings):*

Here you can set, among others, the message service centre number (SMSC) (dependent on the network operator) and other SMS settings.

### *Memory status:*

With this option, the SMS memory status from your SIM card and your telephone are displayed.

### *Sent messages:*

Switch on/off the storage of sent messages

### *Preferred storage:*



Select the storage location for the SMS  
*Telephone* or *SIM*

## **Voicemail server**

Voicemail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

1. Select *Menu, Messages* and press *OK*
2. Select *Message settings* and press *OK*
3. Select *SIM* and press *OK*
4. Select *Voice mail* and press *OK*
5. Press *Option* and choose *Call* or *Edit*.
6. If you choose *Edit*, edit the name and number of the voice mail. After enter the number press *OK*.

*In standby mode:*

Press and hold key number 1 for directly calling the *Voice mail*. Only the number saved under voice mail address 1 is called.

# Call history

## Missed Dialed and Received

The phone registers the phone numbers of *Missed*, *Received*, *Dialed* and *All calls*.

When you press *OK* by *Missed*, *Dialed* or *Received*, you can view the calls you *Missed*, *Dialed* or *Received*. If you press *Option* you can choose the following options:

*View*, *Call*, *Sent text message*, *Save to Phonebook* *Add to Blacklist* and *Delete*.

## Delete call logs

You can delete all the records of the *Dialed*, *Missed* and *Received calls*, you can also choose delete *All calls* to delete all the records of the above-mentioned calls logs.

# Organizer

## Alarm

1. Select *Menu, Organizer* and press *OK*.
2. Select *Alarm* and press *OK*.

You can set a maximum of 5 different alarms.

To set an alarm clock:

1. Select one alarm and press *Edit*.
2. *Edit alarm*: set *On* or *Off*, *Time*, *Snooze*, *Repeat*, *Alarm tone* and *Alert type*.
3. Press *Save* to save the *Alarm*.

When alarm sounds, you can stop the alarm by pressing *Stop*. If you press *Snooze*, the alarm stops and rings after 5 minutes again.

## Tasks

1. Select *Menu, Organizer* and press *OK*.
2. Select *Tasks* and press *OK*

Press *Options* and select *Add*.

Enter the desired details.

To save the event, press *Options* and *Save*.

If there are some existed event in the task list, press the *up / down* key to select an event to get into the *options: View, Add, Edit, Delete, Delete overdue, Delete all* and *View uncompleted*

## Calculator

1. Select *Menu, Organizer* and press *left menu key*.
2. Select *Calculator* and press *left menu key*

The phone is provided with a calculator. This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

In Calculator mode, the following functions are available to you:

Key	Function
<b>1-0</b>	insert a digit.
#	To insert a decimal
<b>Arrow key up</b>	+
<b>Arrow key down</b>	-
<b>Arrow key left</b>	x
<b>Arrow key right</b>	÷
<b>Ok key</b>	=

- The keys 1 to 0 insert a digit.
- To insert a decimal, press #.
- Press the up and down arrow key for +, -
- Press M1 and M2 key for x and ÷.
- Press Camera key for =.

To get the result, press *Equal*. Press and hold *Clear* to clear the display for a new calculation.

## Calendar

1. Select *Menu, Extras* and press *OK*
2. Select *Calendar* and press *OK*
3. *Add events:*
4. Press *Options* and select *Add event*.
5. Enter the desired details.
6. To save the event, press *Options* and *Save*.
7. If there are some existed event in the task list, press the *up / down* key to select an event to get into the *options: View, Add, Edit, Search and Delete*.

On the calendar interface, press the Navi keys to browse through different days.

## Camera

### Taking photographs

Point the camera lens at a position or an object and press the *Camera* key or the *OK* key to take a photo. After the snapshot has been taken, the photo is shown on the display and automatically saved.

**Note: To save images, you need a Micro SD memory card up to 16GB. (Not included in the accessories)**

With *Options*, the following options are available:

*Photos:*

View the saved photos (in .jpg format). You can send and also receive the photos via *Bluetooth*.

The following functions are available to your under *Options*: *Show, Browser style, Send, Use, Rename, Delete, Sort by, Save and Image information.*

*Camera settings:*

Set *Shutter sound, EV, Contrast, Anti-flicker, and Delay timer.*

*Image settings:*

Defining the *Image size, and Image quality.*

*White balance:*

Adapt to the ambient lighting conditions.

*Scene mode:*

Select between *Automatic and Night*

*Effect settings:*

*Here you can add different photo effects.*

*Storage:*

Select between: *Phone or Memory card (if available).*

*Restore setting:*

*Restore the default setting.*

In photo mode, the following quick functions are available:

Key	Function
1	Change image resolution
2	Image quality
4	White balance
6	Delay timer
Arrow key up	Zoom in

Arrow key down	Zoom out
Arrow key (left)	Underexpose image (EV-)
Arrow key (right)	Overexpose picture (EV+)

*Restore setting:*

Restore the default setting.

In Photo mode, press the left menu key "Options" to access the following functions:

## **Image viewer**

1. Select *Menu, Multimedia* and press *OK*
2. Select *Image viewer* and press *OK*

View the saved photos (in .jpg format). You can send and also receive the photos via *Bluetooth*.

The following functions are available to your under *Options: View, Send, Use as, Rename, Delete, Storage* and *Image information*.



## FM-radio

1. Select *Menu, Multimedia* and press *OK*
2. Select *FM-Radio* and press *OK*

The tuned frequency is displayed.

In FM-Radio mode, the following functions are available to you:

Key	Function
<b>Arrow left</b>	Search previous channel
<b>Arrow right</b>	Search next channel
<b>Arrow key (upwards)</b>	Set frequency up by 0.1Hz
<b>Arrow key (downwards)</b>	Set frequency down by 0.1Hz
<b>OK key</b>	On/off the radio function

Enter *Options*, you can make the following operations:

*Channel List:*

There are 30 channels for you to store.

*Manual Input:*

Inputs the FM frequency you prefer.

*Auto search:*

bea<sup>fon</sup>

Scan the stations and save the stations found in the channel list.

### *Settings:*

*Play in the background:*

*This function also enables you to listen to the radio even though you have left the Radio menu.*

**Note:** *Auto search needs some time, so please be patient.*

*For better radio reception connect a headset to the headset socket.*

## **File Manager**

1. Select *Menu, Multimedia* and press *OK*

2. Select *File Manager* and press *OK*

Select *Memory card* and then press the *left menu key* to access the submenus.

If you press *Option* by a file or folder you can choose the following options:

*Open:*

To display the content of the selected folder.

*Send, New folder, Rename, Delete, Copy, Marks serval, Move, Delete all files, and Details.*

# Settings

## Profiles (Tone settings)

Enter in the function; display the profile mode list including *General*, *Silent*, *Meeting*, *Outdoor*.

Select one mode and enter the option menu:

*Activate*: Activate the profile mode.

*Customize*: Customize the profile mode as following:

*Alert type*, *Ring tone*, *Ringtone volume*, *Message tone*, *Message volume*, *Keypad*, *Keytone volume*, *Cover open*, *Cover Close* and *System alert*.

*Reset*: Reset the setting to the default.

## Silent mode

Silent is a fixed profile with ring tone, keypad tone and message tone disabled. The alarm signals even if the phone is set to silent. Press and hold # to activate/deactivate Silent mode.

## SOS settings

The SOS app is a simple function that can save lives at a crucial moment. You can save any number of contacts and an SMS notification.

These SOS numbers, which can be initially saved in sequence, will be dialled automatically in an emergency as soon as you press and hold the emergency call button at the back of the mobile phone for approx. 2 seconds.

Once the emergency call is enabled, a warning tone will sound so that also the people in close proximity will be able to hear it.

After that, an SOS SMS will be sent to all the SOS numbers saved, if enabled

As a next step, if the first SOS number is dialled; if this is not available, the next number will be dialled automatically, etc.

The phone tries to reach the SOS contact for approx. 19 seconds (call confirmation signal). If it is not reached, the phone will terminate it automatically and dial the next SOS number.

This function prevents a call from being forwarded to the mobile box.

In most carriers in Europe, call forwarding to the mobile box starts after about 20 - 25 seconds.

**Attention:**

Please ensure that your SOS contacts set the mobile box activation no sooner than 20 seconds.

**Note:**

If you want to stop or cancel the emergency call, press the red key or the SOS button.

When using a Prepaid card:

Always ensure for sufficient funds on your prepaid card, since private emergency call numbers cannot be dialed without sufficient funds.

Outside of your network operator's home network, the international SOS 112 can usually still be called.

## **Note:**

If you save emergency call numbers such as rescue, police, fire department, etc., you must clarify this in advance with the respective institutions. No liability is assumed for possibly incurred costs if you call by mistake.

## **Important:**

During an emergency call, the hands-free function is enabled automatically. Do not hold the phone to your ear!

## **SOS**

1. Select *Menu, Settings* and press *OK*
2. Select *SOS* and press *OK*

### *SOS Status*

You can turn the *SOS button* on/off.

### *SOS number*

Define a maximum of 5 *SOS numbers* and their priority sequence.

### *Enable/disable SOS SMS*

Enable or disable additional Send SOS SMS function.

### *SOS message*

If the SOS call is started and not answered, this text will be sent to *SOS numbers*. The text can be changed as desired.

## Phone settings

*Time and date:*

Set Home city *and time and date*

*Language:*

Here you can choose the language you want in your display.

*Pref. Input method:*

Here you can choose the Input method you want for write.

*Display:*

*Wallpaper*

Select your favourite picture as the wallpaper of the standby window.

*Display*

In this menu, you can show/hide the time and date display in default mode.

*LCD backlight:*

LCD backlight for setting up the duration (sec) of backlight and brightness.

## Call settings

Depending on network operator support and subscription, you can choose the following options:

### *Caller ID:*

Set the function of caller ID

### *Call waiting:*

When this network service is activated, the network notifies you of a new incoming call while you have a call in progress. Press *OK* to answer the waiting call. The first call is put on hold or press the *red key* to reject the call.

### *Call divert:*

To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.

### *Call barring:*

With this network service you can restrict the making and receiving of calls with your phone.

### *Call time reminder:*



Choose to remind you *Periodic* (30-60 seconds) or select *Single* (1-3000 Seconds) or select *Off*.

### *Answer Mode:*

*Cover answer*

*Open the phone to answer the incoming call.*

*Any Key*

You can press any key to answer a call.

*Auto answer when headset mode*

The phone answer the call automatically.

### *Advanced settings*

#### *Black list:*

With this function you can block incoming phone numbers.

## **Network settings**

This menu has connection with the network suppliers, so please get in touch with them when you use this function. If you want to get into one network which doesn't have the roaming protocol with the original network you have been in, the phone will display the content that you can make an emergency call.

### *Network selection:*

Depending on network operator support, you can choose the following options:

Selection mode

Set *automatic* or *manual mode*

## **Security settings**

You can choose the following options:

*SIM security:* To turn your SIM PIN code *On* or *Off*, *change PIN* and *change PIN2*.

*Phone security:* To lock your phone with a password. The default password is: *0000*.

*Change password:* Here you can change your password of: *Phone password*.

## **Connectivity:**

You can connect wirelessly to other Bluetooth compatible devices.

### **Bluetooth:**

In standby mode: Press the down arrow key to go directly to Bluetooth.

You can choose the following options:

bea<sup>fon</sup>

### *Power:*

Here you can choose to turn Bluetooth *On* or *Off*.

### *Visibility:*

you can set the visibility *on* or *off*.

### *My device:*

List of saved devices and enables you to add new devices; *Search new device*.

### *Search audio device:*

Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing *Yes*.

### *Search audio device description:*

1. Press *OK*, the phone is going to search for new devices.
2. Select the devices you want to connect with and press *Pair*.
3. When connecting with another Bluetooth device you need a shared passcode. Enter the passcode and press *OK*.
4. Select the device from the list and press *Option*. Can choose the following options: *Connect*, *Rename*, *Delete* and *Delete all*.

### *My Name:*

Here you can set the Bluetooth device Name.

### *Advanced:*

Here you can set your: *Audio path*, *Storage* and check the *My address*.

## **Restore factory settings**

To reset some of the menu settings to their original values. The password is: *0000*

## **Basic Specifications:**

Network-Dual-Band	GSM 900/DCS1800
Dimension :	101x50.5x19.5mm
Battery :	Li-ion 3.7V - 800mAh
Standby time:	up to 250 hours*
Talk time:	Up to 480 minutes*

*\*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.*

# Troubleshooting

If problems or irregularities occur while using the phone, please refer to the information in the following table. If a particular problem cannot be solved using the following information, please contact the dealer where you purchased the phone.

The phone cannot be turned on:

- Check whether the battery is correctly inserted into the telephone.
- Check the battery status, charge the battery for 24 hours or replace it, if necessary (a six-month warranty applies).
- Check whether the PIN code was entered correctly.

If the PIN code is entered incorrectly 3 times, the SIM card will be blocked and you will need the PUK code (please contact your carrier for your PUK code).

SIM card error:

- Dirt on the contact areas of the SIM card? Clean the contact areas of the SIM card.

- SIM card is not inserted properly, insert the SIM card correctly.
- SIM card does not function or is damaged? Get your SIM card checked by your network operator.

Network connection cannot be made:

- Bad reception? Move to an open space or if you are in an enclosed space, near the window.
- You are out of range of the mobile network. For information about coverage, please contact your network operator.
- SIM card is invalid. Contact your service provider.

Bad voice quality:

- Poor network connection quality on the part of the network provider? Press the end key and select again. You may be routed to a network connection or phone line with better quality.
- Poor quality of the local telephone line? Press the end key and select again. You may be routed to a network connection or phone line with better quality.

- Try turning the volume up louder.

Outgoing calls cannot be made:

- Check the phone number and try again.
- Have you activated call barring? If so, please disable all call barring.
- Check whether the SIM card is registered on the network.
- Check whether enough credit is on your SIM card.

You do not receive incoming calls:

- Check whether the SIM card is registered on the network.
- Check whether the phone is turned on.
- Check the signal strength
- Have you activated call barring? If so, please disable all call barring.

Send SMS does not work

- Please check the SMSC number (message centre number) in the following menu item:  
"Messages - Settings - SMS settings - SIM - SMSC - Address": Your carrier's message centre number should appear here.

Display is black:

- Check the battery status, charge the battery, or replace it.
- Check the background image.
- Did the phone get wet?

Blocked PIN:

- Check whether the PIN code was entered correctly. If the PIN code has been entered incorrectly 3x, the SIM card is locked and you will need the PUK code: (Please contact your network operator for your PUK code).

I cannot hear the conversation partner:

- During a call, please use the side buttons to adjust the call volume.

*Note: If a specific problem cannot be solved using the information above, visit our website [www.beafon.com](http://www.beafon.com) and select the product page of your phone and read the FAQ (Frequently Asked Questions) or contact the customer support. Please do not try to repair the phone yourself.*



# Intended operation/use

## Phone

If you follow the recommendations below, you will prevent the warranty from early becoming null and void, and you will continue to enjoy your product for years to come.

- Please use original accessories only or accessories approved by your mobile phone manufacturer. Failure to use original and/or approved accessories may result in poor performance, damage to the phone or even to your body, and may affect local telecommunication equipment.
- Please turn off the mobile phone before cleaning it. Use a wet or antistatic cloth for cleaning; avoid using chemicals or cleansing lotions that may cause damage to the phone.
- Because the mobile phone can generate electromagnetic fields, avoid placing it near any magnetic objects such as a computer or a hard drive.
- Interferences are generated when the mobile phone is used near certain

electronic devices, e.g., a TV set, a telephone, a radio, and a computer.

- Never leave the mobile phone exposed to sunlight or in an environment with strong radiation as high temperatures will significantly shorten the life of the electronic components.
- Always keep the mobile phone dry as liquids could damage the integrated circuit.
- Never apply strong force to the phone and do not drop it. Forceful actions of this type can damage the circuit.
- Please do not connect incompatible devices to the phone.
- Do not attempt to disassemble the mobile phone or its battery.
- Do not keep the mobile phone together with a flammable or explosive material.
- Never attempt to charge the phone without first inserting the battery.
- Do not paint the phone. Paint can cause the moving parts to stick together and thus prevent the proper operation.
- To disconnect the device from the mains, unplug the power cord from

the mains outlet. Therefore, the device must be positioned in such a way as to ensure unhindered access to the mains outlet at all times, so that you can pull out the plug from the mains outlet immediately in an emergency. To prevent fire hazard, always pull out the plug from the mains outlet after each use of the device.

All notes apply likewise to the phone, battery, charger, and all the accessories. Should one of these parts malfunction, send it to your dealer. The staff will assist you and repair the device, if necessary.

## Battery

- Your phone is supplied by means of a rechargeable battery.
- Note that a new battery will not reach its full charge until it is fully charged and discharged two or
- three times! Although the battery can be charged and discharged hundreds of times, it will eventually degrade. If the operating time (talk and standby time) is considerably shorter

compared to the normal operating time, you should buy a new battery.

- Disconnect the charger from the network and from the device when it is no longer needed! When the battery is fully discharged, it may take a few minutes for the charge indicator to appear on the display or for you to make calls.
- Use only batteries and chargers approved by your phone manufacturer. Unplug your charger from the mains outlet when not in use. Do not leave the battery in the charger for more than a week since overcharging may shorten its life.
- A fully charged battery discharges over time when not in use.
- Extreme temperatures have an adverse effect on the performance of your battery.
- Use the battery only for its intended purpose. Do not use damaged chargers or batteries.

Do not short-circuit the battery. An unintentional short-circuit may occur when the plus and minus poles of the battery are connected directly by means of a metallic object. Short-circuiting the

poles may cause damage to the battery or the connecting object.

- Do not throw batteries into fire as there is risk of explosion! Batteries can also explode if they are damaged. Batteries must be disposed of properly!
- Do not attempt to open or destroy batteries. If a battery features liquid leaking from it, make sure that this liquid does not come into contact with the skin or eyes. In case of contact with skin or eyes, rinse immediately with plenty of water or seek medical advice.
- Dispose of batteries according to official regulations (e.g., regarding recycling). Never dispose of batteries together with household waste.
- Keep temperatures between 15°C and 25°C. A phone with a too cold or warm battery may not work temporarily, even if the battery is fully charged. The battery performance is particularly affected at temperatures below freezing.

# Recycling

Always return your used electronic products, batteries, accumulators, and packaging materials to dedicated collection points. In this way you help prevent the uncontrolled waste disposal and promote the reuse of material resources.



The crossed out wheeled bin symbol found on the product, battery, packaging material, and in the documentation means that electrical and electronic products, batteries, and accumulators should be disposed of separately from your household waste at their end-of-life. This regulation applies in the European Union. Do not dispose of these products with the unsorted household waste

## For your safety

Read these simple guidelines. Failure to observe these rules can have harmful consequences or contravene regulations.



Do not turn on the phone if the use of mobile phones is prohibited, or may cause interferences or danger.



Traffic safety  
Do not use your phone when driving a vehicle.



Turn off the phone during a flight  
Mobile phones can cause interferences with aircraft systems.



Turn off the phone in hospitals  
Follow all rules and regulations.  
Turn off the phone near medical equipment.

Turn off the phone at filling stations



The mobile phone must be turned off in the vicinity of filling stations and other places with explosive goods.



Interferences

Mobile phones may cause interferences that could affect the performance.

### **Traffic safety:**

Do not use your phone when driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat, or in a place where it may come off in case of a collision or a sudden brake manoeuvre. Remember: Traffic safety always has priority!

### **Operating environment:**

Always observe special regulations applicable in a particular area, and always turn off the phone when the use of mobile phones is prohibited, or if interferences are caused by the phone, or if dangerous situations may arise.



Always keep the device in its normal operating position.

Parts of the phone are magnetic. Metal parts can be attracted by the phone, and people with hearing aids should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder as metal parts can be attracted by the handset. Do not place credit cards or other magnetic media near the phone as the data contained therein may be erased.

### **Electronic equipment:**

Most modern electronic devices have RF (radio frequency) shielding. However, certain electronic devices may not be protected from the RF signals from your mobile phone.

### **Pacemakers:**

Pacemaker manufacturers recommend that a minimum distance of 20 cm between a mobile phone and a pacemaker be maintained in order to avoid potential interferences with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless

Technology Research. For people with a pacemaker:

- You should always keep a minimum distance of 20 cm between the mobile phone and the pacemaker when the phone is turned on.
- You should not keep the phone in the breast pocket.
- When using a mobile phone, you should hold it to the ear that is farthest away from your pacemaker to reduce the risk of possible interferences.
- If you have a reason to suspect that an interference has occurred, turn off your phone immediately.

### **Hearing aids?**

Some digital mobile phones may cause interferences with some hearing aids. Should that be the case, please contact the service provider.

### **Other medical equipment:**

Operation of a radio, including a mobile phone, may interfere with the function of insufficiently shielded medical equipment in certain cases. If you need information to adequately shield a medical device

from external RF energy, or have questions about other subjects, please contact a physician or a medical device manufacturer. Turn off your phone in healthcare facilities when prompted by signs, notices or other written regulations. In hospitals or healthcare facilities, equipment that could be sensitive to external RF energy may be used in certain cases.

### **Approved locations:**

Approved locations:

Turn off your phone wherever the use of a mobile phone is prohibited.

### **Potentially explosive atmospheres:**

Turn off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to turn off the phone while at filling stations.

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in

progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include, e.g., the below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles such as grain, dust, or metal powders, as well as any other area where you would normally be advised to turn off your vehicle engine.

### **Vehicles:**

In certain cases, RF signals may interfere with the function of improperly installed or inadequately shielded electronic systems in your vehicle (e.g., electronically controlled petrol injections, electronic ABS (anti-lock braking) systems, electronic cruise control, airbag systems).

For information about your vehicle, please contact your vehicle manufacturer or its representative. You are also advised to contact the manufacturer of equipment installed in your vehicle.

# Information

## Certification information (SAR):

This phone model meets the requirements for electromagnetic fields. The SAR (specific absorption rate) regulates a standard value of 2.0 W/kg as the mean value per 10 grams of body tissue, and this mobile phone type has a test value of: 0.855W/kg, that is in line with the EU Radio Equipment Directive (RED) 2014/53/EU. The SAR values may vary depending on national regulations and the network band.

You can download a copy of the declaration of conformity at any time from our homepage at:

<http://beafon.com/service/certification/>

	Max. Transmission power
GSM 900:	1995mW
GSM 1800:	794mW
Bluetooth:	3,38mW

## **Declaration of Conformity:**

Bea-fon Mobile GmbH hereby declares that the SL640 model complies with the essential requirements and other relevant provisions of EU Directive (RED) 2014/53/EU. The full text of the declaration of conformity can be requested at any time.

## **Limitation of liability:**

- Bea-fon Mobile GmbH shall not bear any liability for any relevant, indirect, special, incidental, or inevitable injuries caused by using this product, including injuries which can be predictable or not.
- For any losses caused by natural disasters (such as earthquakes, flood, etc.) or other events or accidents (including deliberate or accidental misuse by the user in the context of these accidents or other unusual circumstances), which are outside the scope of our liability, we disclaim any responsibility and liability.

## More information

Should you have questions or want to get more information about any of our products, you can visit our website [www.beafon.com](http://www.beafon.com). or even contact us.

E-mail: [support@beafon.com](mailto:support@beafon.com)

## Address

BEAFON MOBILE GmbH  
4722 Peuerbach  
Enzing 4  
Austria

V1.0



CE